
NeuroNexus

MAPPING
Adpt.A64-OM32x2
Updated Jul 2, 2024

Adpt-A64-OM32x2 Adaptor Map

NOTE: This diagram shows the channel mapping within the adaptor itself, and is not a map of the final pin-out.

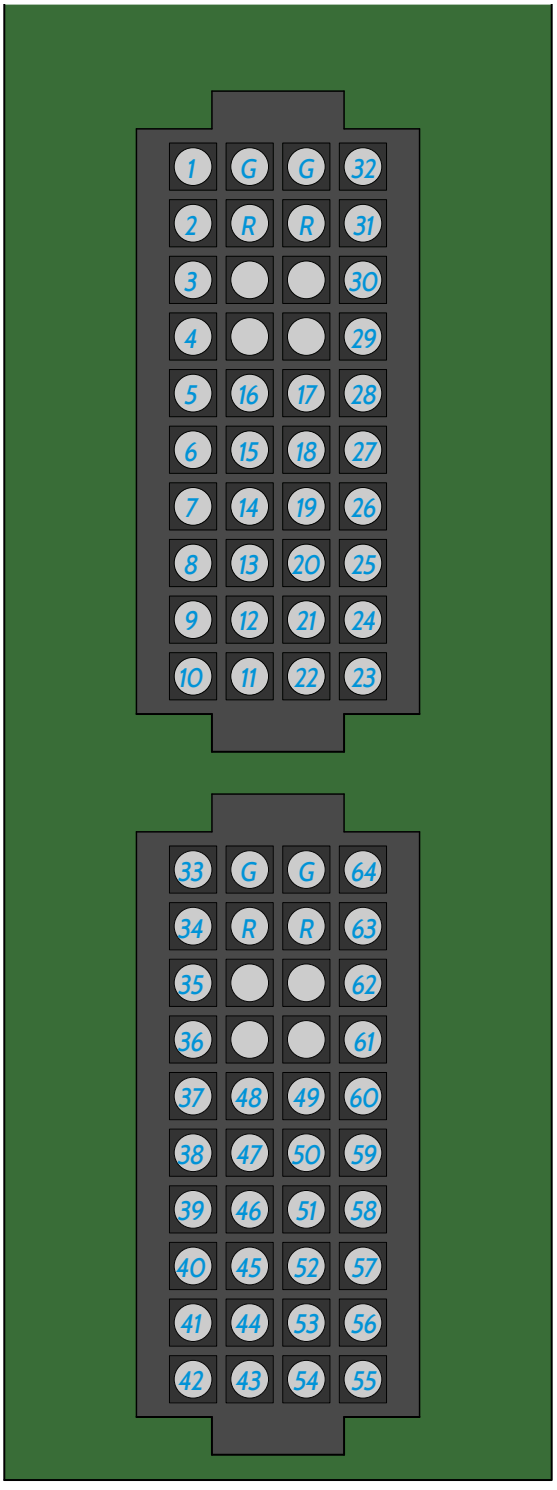

A64 Female Connector

G = Ground
R = Reference

NeuroNexus Technologies, Inc. ©2024 | 5200 S State St., Suite 200, Ann Arbor, Michigan USA
Telephone: +1.734.913.8858 | Fax: +1.734.786.0069 | support@neuronexus.com

NeuroNexus

MAPPING


Adpt.A64-OM32x2
Updated Jul 2, 2024

Adpt-A64-OM32x2 Adaptor Map


NOTE: This diagram shows the channel mapping within the adaptor itself, and is not a map of the final pin-out.

OM32x2 Connector

Left

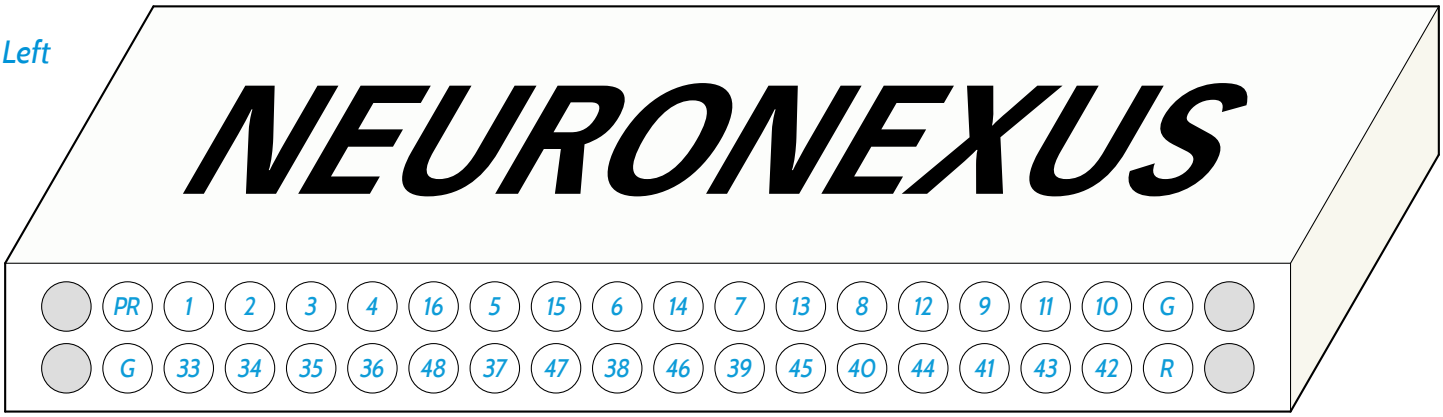

Right

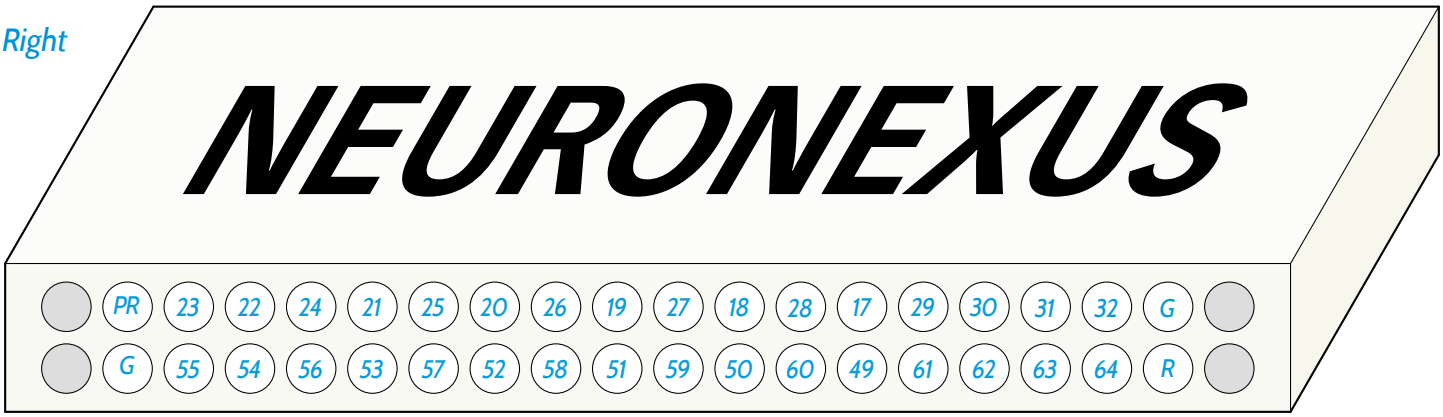

G = Ground
R = Reference

NeuroNexus Technologies, Inc. ©2024 | 5200 S State St., Suite 200, Ann Arbor, Michigan USA
Telephone: +1.734.913.8858 | Fax: +1.734.786.0069 | support@neuronexus.com