
NeuroNexus

ADAPTOR MAP


Adpt-OM32x2SM-A64
Updated February 19, 2020

Adpt-OM32x2SM-A64 Adaptor Map

NOTE: These diagrams shows the channel mapping within the adaptor itself, and is not a map of the final pin-out.

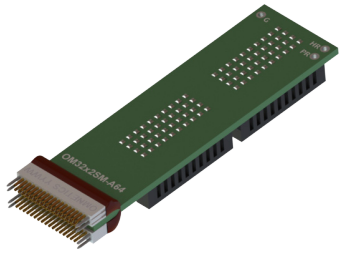

OM32x2 Pin In

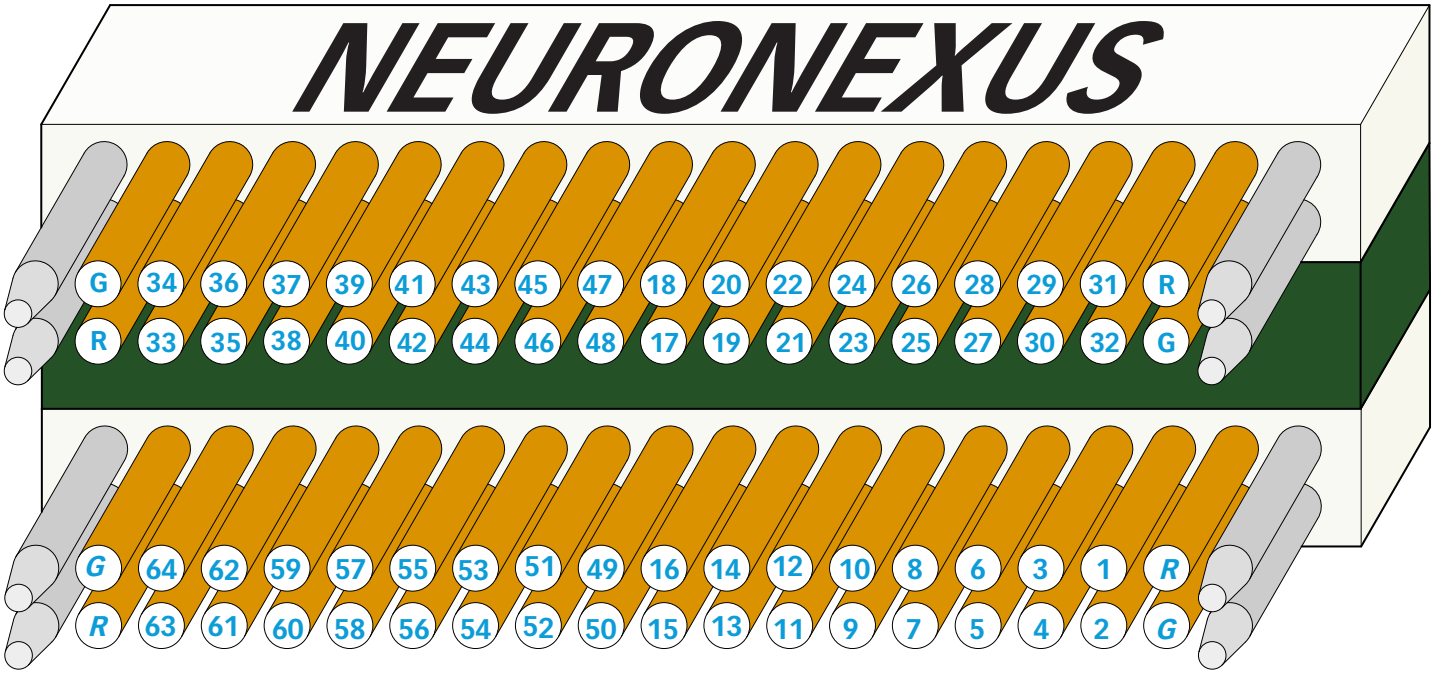

G = Ground
R = Reference


NeuroNexus Technologies, Inc. ©2026 | 640 Avis Dr., Suite 200, Ann Arbor, Michigan USA
Telephone: +1.734.913.8858 | Fax: +1.734.786.0069 | support@neuronexus.com

NeuroNexus

ADAPTOR MAP

Adpt-OM32x2SM-A64

Updated February 19, 2020

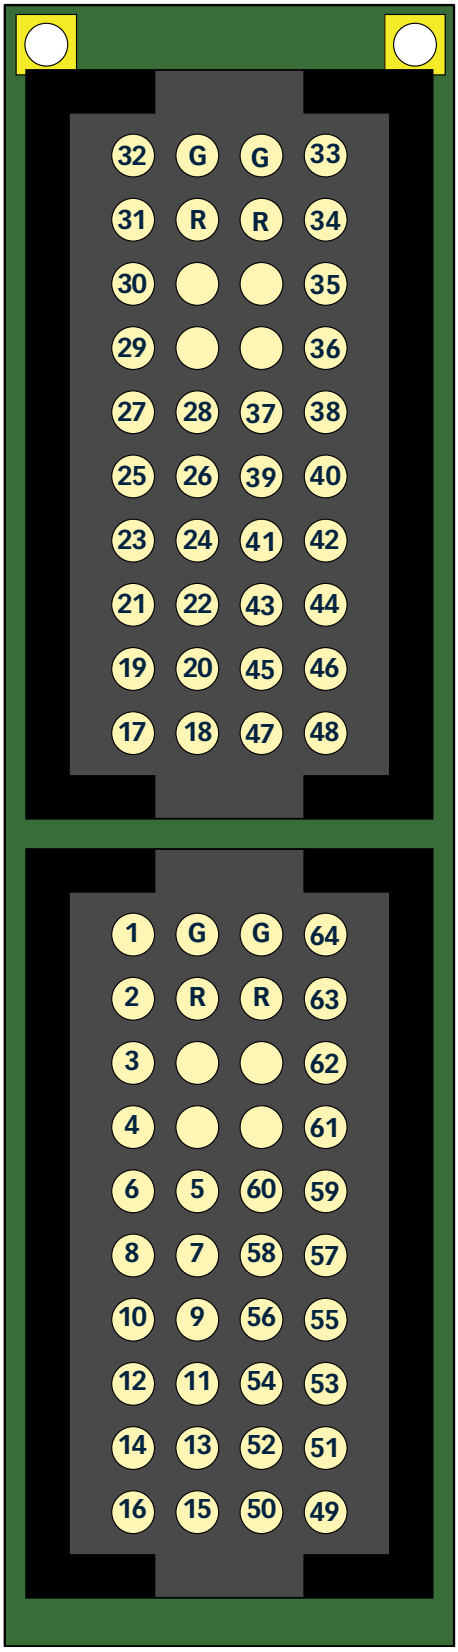

G = Ground
R = Reference

NeuroNexus Technologies, Inc. ©2026 | 640 Avis Dr., Suite 200, Ann Arbor, Michigan USA
Telephone: +1.734.913.8858 | Fax: +1.734.786.0069 | support@neuronexus.com